


Tutorial to adapt in 3 steps garages with door automatic My robot home Auto-MOW to robots WIPER F and K series

*Also valid for robots
Ambrogio (4.0 & L250 series)
Tech (Bx4, Lx4 and 25 series)*



Step 1

Add a notch on each side

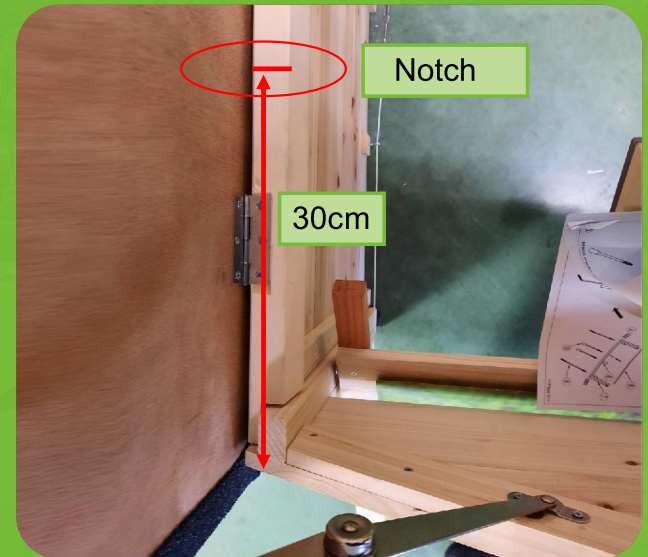

Step 2

Adjust the movement of the balance



- 1 - Undo the nylon cable from the door
- 2 - Remove the thread grommet on the cleat
- 3 - Remove the cable tensioner



- 4 - Hook the nylon cable directly onto the spring
- 5 - Adjust the movement of the door and hook the cable permanently on the door



**Robot
Installation**

Step 3

Check the passage of the door



After assembly, there must be no friction between the structure and the door to prevent the robot from getting stuck inside.

If necessary, adjust... My robot home is now ready.



Robot
Installation

+45 61 60 59 50 info@auto-mow.com www.auto-mow.com

**Your Wiper robot
will be well protected
by My Robot Home**

